Installation instructions for installing Chrome OS on the old Macbooks (White, Sharp-Edged).

Skip to step 11 if you already have a USB key with the Image.


To make the image, you must be on Windows, Mac, or ChromeOS. (No other Linux users, sorry.)

- 1. Download the 32-bit image to flash @ https://www.neverware.com/freedownload/
- 2. Download the Chromebook Recovery Utility @ https://tinyurl.com/lljsl4o
- 3. Unzip the 32-bit image, you should get a chromiumos_image.bin file (or something similar)
- 4. Start up the Chromebook Recovery Utility via "chrome://apps". A new window should appear.
- 5. Click on the gear on the Upper Right of the Utility (Near the Minimize, Expand, and Close buttons)
- 6. Select "Use Local Image"
- 7. Select the previous image that you just unzipped.
- 8. Use an 8 or 16GB USB Drive ONLY for this step, using something bigger results in invalid partitions, while something smaller results in lack of space errors.
 - a. Select the CORRECT drive to flash the image on. (All data on that drive will be lost.)
- 9. Wait for the image to flash. (Go get a cup of coffee, it'll take a bit. ~10-20min.)
- 10. You now have your image. Let's get started on the actual installation.


Begin Installation Process.

- 11. On the macbook, you will need to boot to USB. Turn off the macbook and hold ALT (Option) to boot to the EFI Menu.
- 12. Select the External Drive (Imaged as a Yellow USB Drive) named EFI Boot. (NO other drives should be plugged in to minimize confusion)
- 13. Wait for boot, you will briefly see "Welcome to GRUB!" for a moment, that is ok.
- 14. You should end up eventually at a setup prompt. DO NOT SETUP as you are not installed.
- 15. Click on the Status Menu on the Lower Right, and select "Install CloudReady."
- 16. A menu should pop up, click continue.
- 17. Under installation type, select "Install CloudReady Standalone"
- 18. Go get another cup of coffee. This will take a while (~15-30 min), the computer should shutdown after it's finished.
- 19. AFTER the system has shutdown, unplug the USB drive and reboot. It should automatically reboot into ChromeOS without the USB drive if everything is done correctly.


Step 1

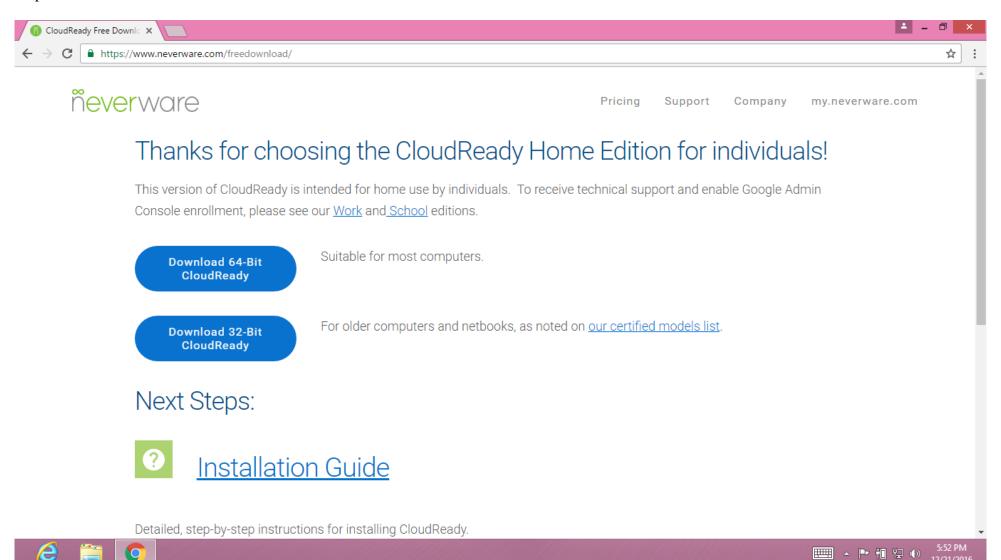


Step 2

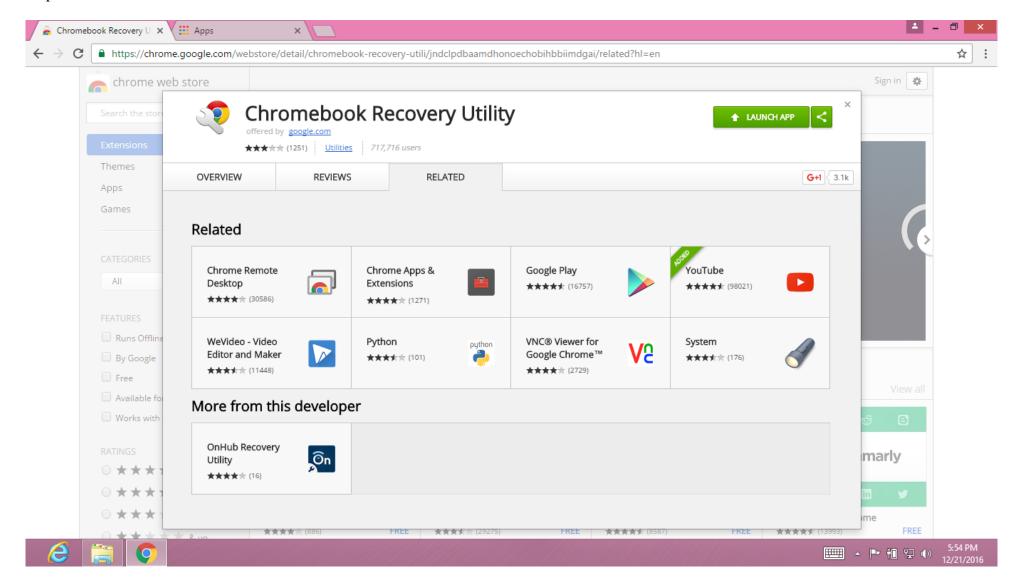


Step 3.1

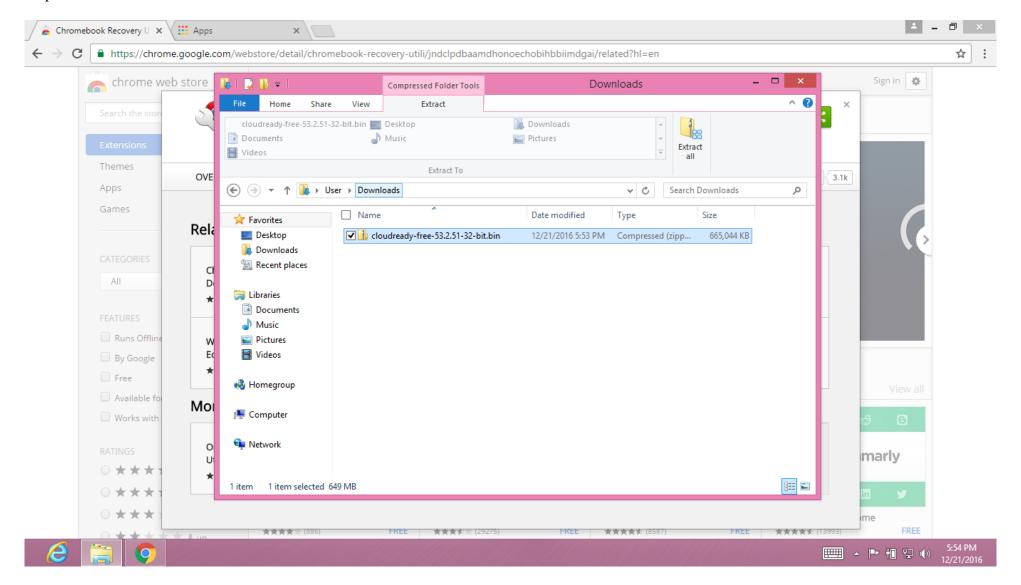


Step 3.2

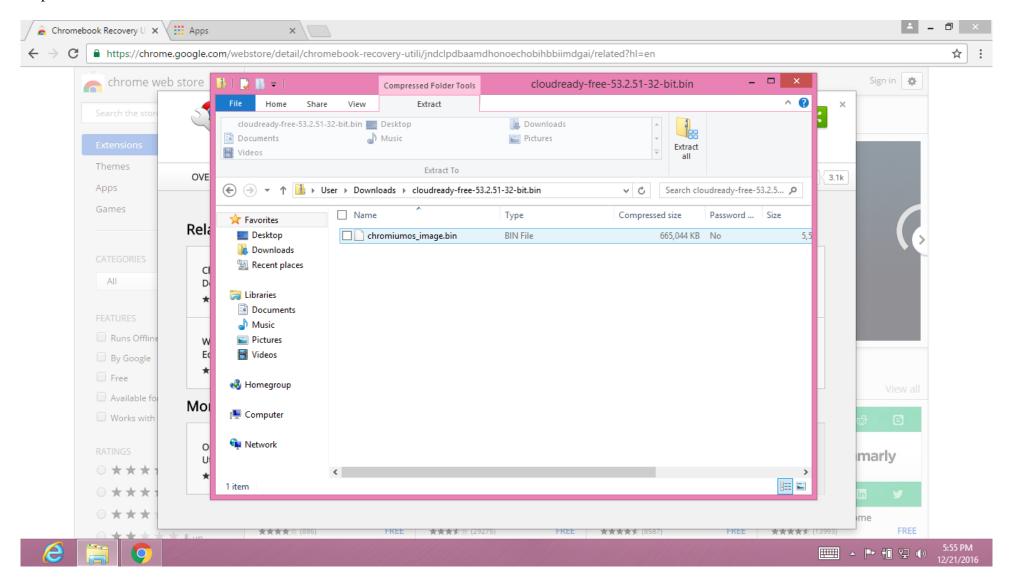


Step 4.1

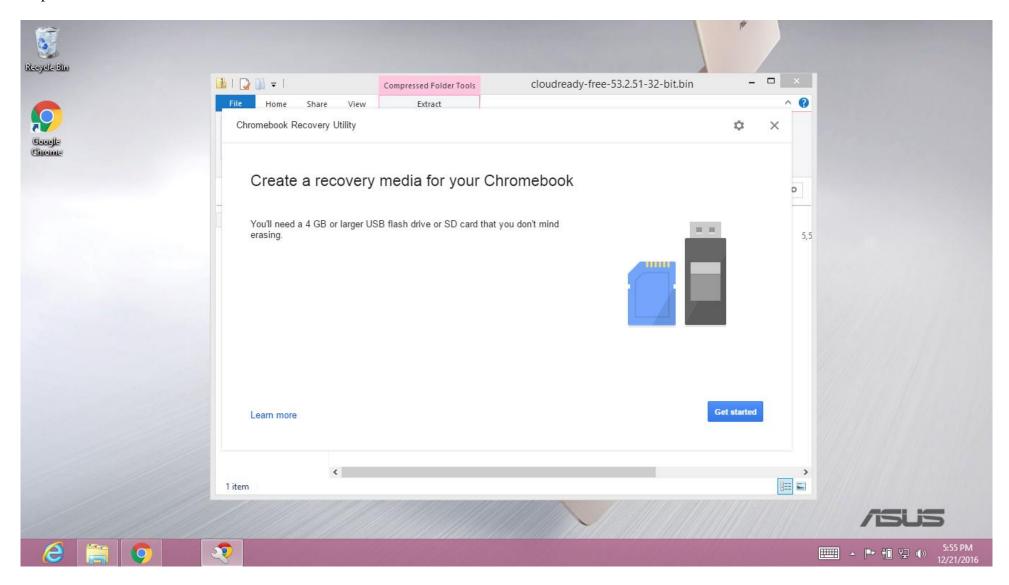


Step 5

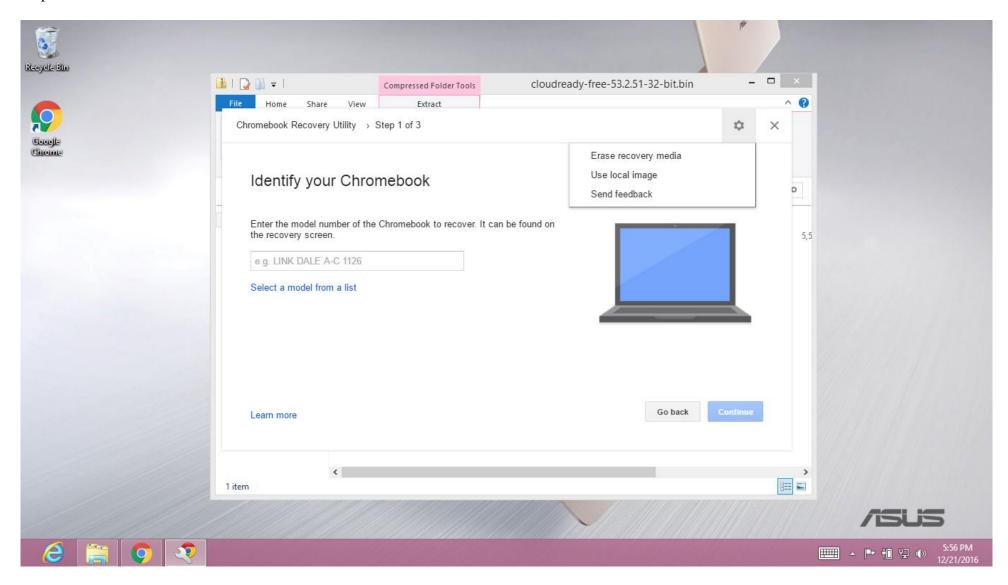


Step 6

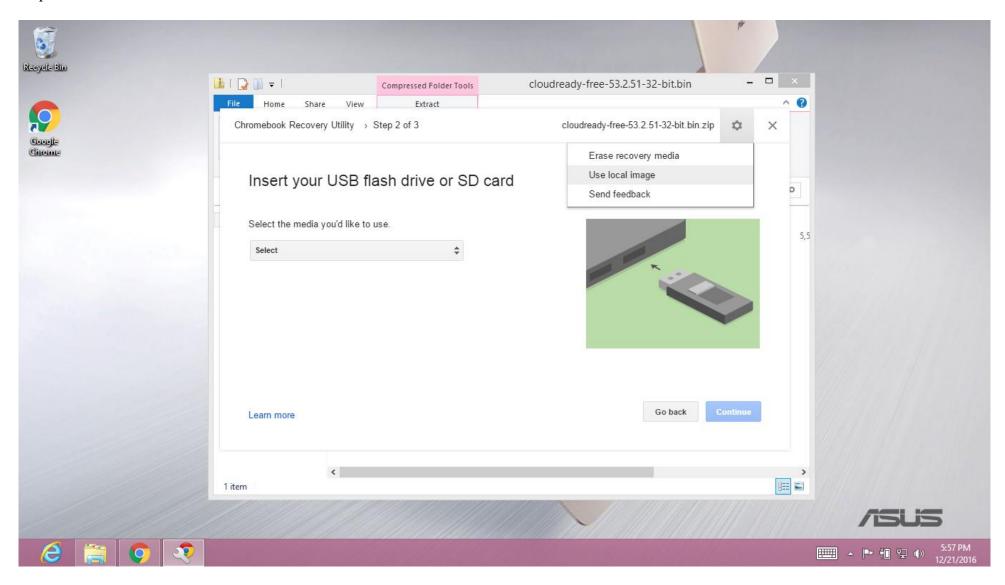


Step 7

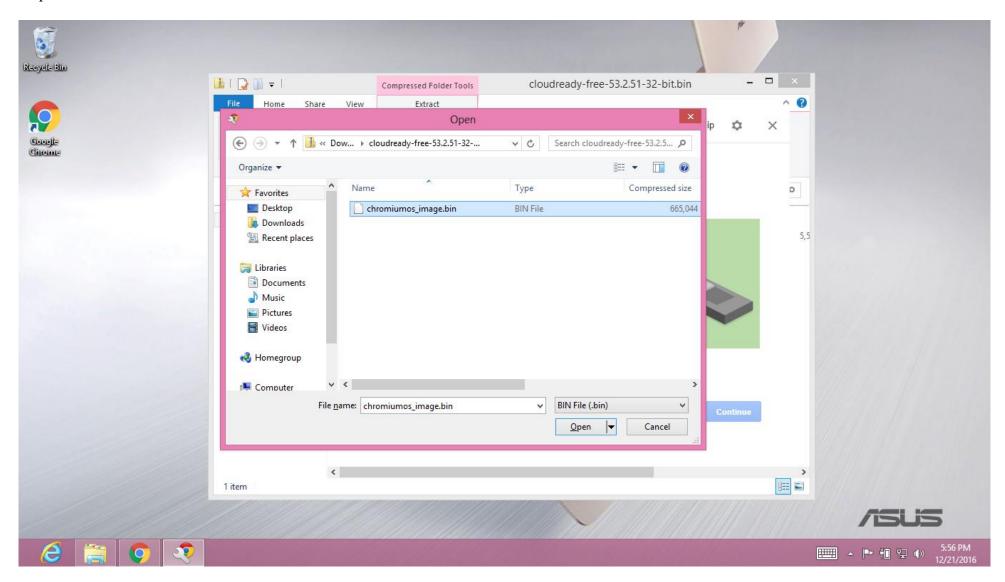

Step 8

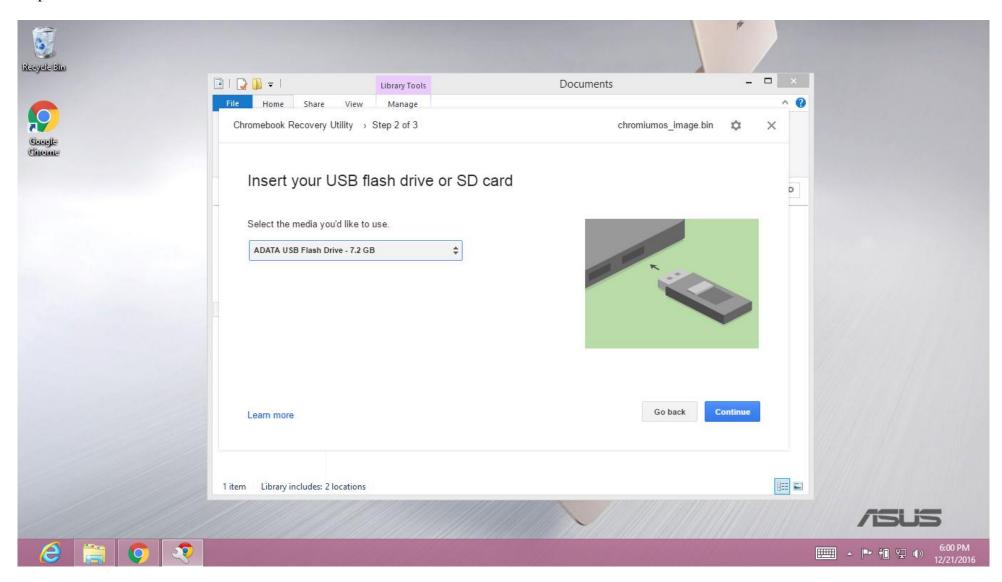

Step 9

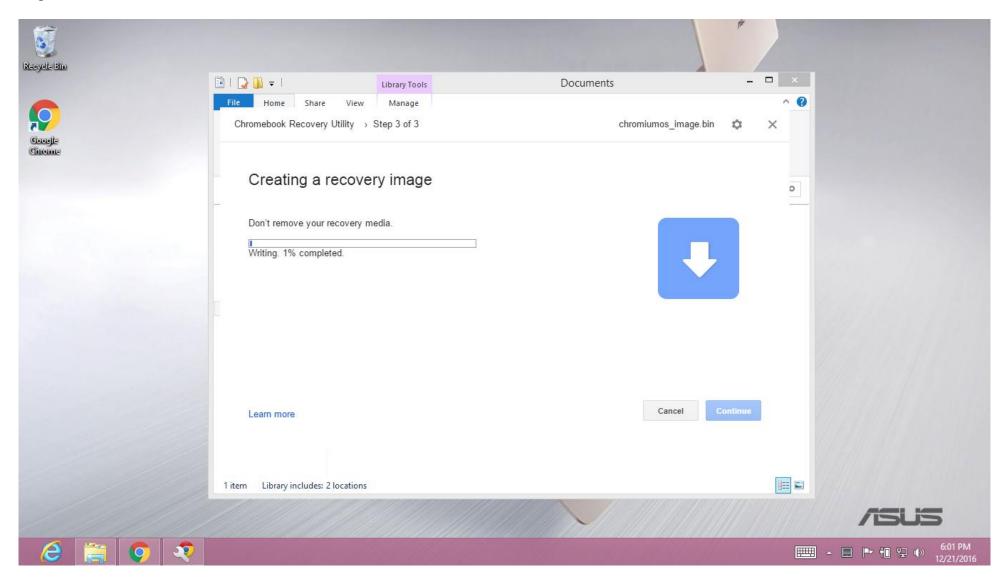

Step 10

